

## Landing heads

Landing heads are used to tie in the wellhead in order to make hole annuity hermetization, casing hanger, and Christmas tree installation. After drilling from the surface wellhead preventers are taken apart and Christmas tree is installed.

### We offer the follow dimension-types:

- OKK1M-21-168x245x324K1;
- OKK2M-21-168x245x324K1;
- OKK3M-21-168x245x324K1;
- OKK3M-35-168x245x324K1;
- OKK3M-70-168x245x324x426K1;
- OKK3x105-168x245x324x426K1.

